


External Sensor for Thema vintage

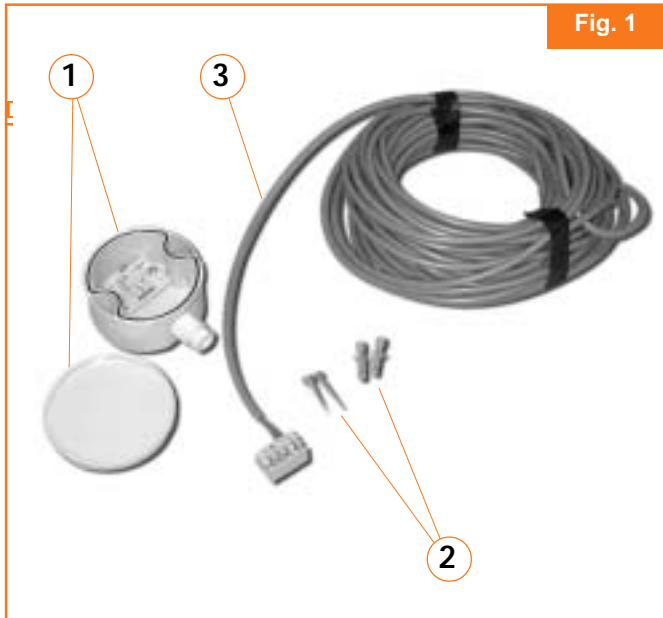

- 1 - 1 round plastic box with sensor
- 2 - 2 screws and 2 wall plugs (in the sensor)
- 3 - 2 wire-cable of 15 m with 4-way connector


Application

Themaclassic, Thema, Themafast and Themaplus

The external sensor controls the temperature of the heating water, according to the outside temperature. It works only with an installation equipped with a room thermostat.

Characteristics

- Tension d'alimentation fournie par la chaudière : 24 V (continu)
- Raccordement direct du câble de la sonde (15 m) sur la carte principale de la chaudière
- Adaptable operation to suit the climat conditions in the area :
15 settings are available, with direct setting on the user interface

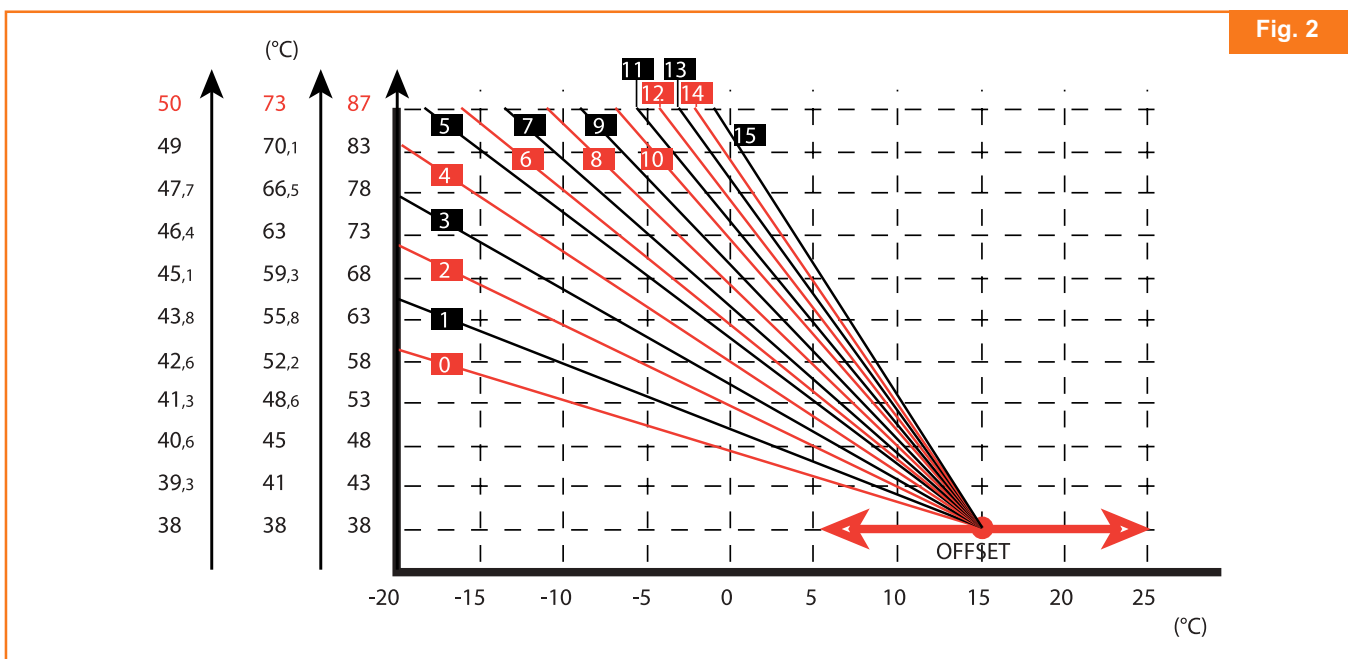

Installation conditions

For the sensor :


- recommended siting facing NORTH - NORTH-WEST
- avoid interference from the sun (the shelter of an awning is perfect).
- Fix the sensor to the wall, preferably with a bracket so as to avoid taking the temperature of the supporting wall.

For the cable :

- in compliance with electricity standart NF C 15-100.

Assembly instructions (Fig. 3)

- Disconnect the 230 V supply of the boiler before plugging in the external sensor.

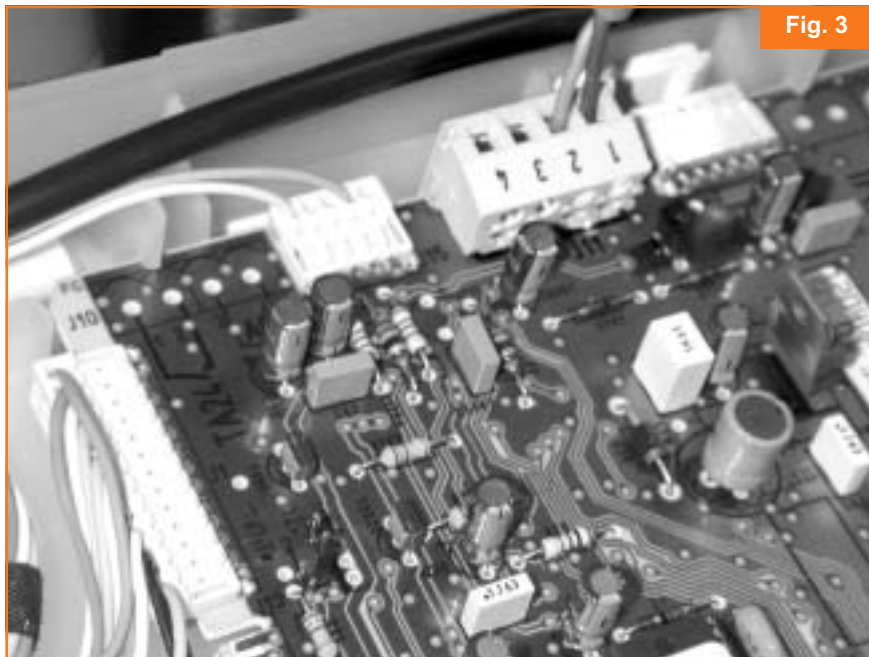

IMPORTANT :When first switched on, the boiler runs at maximum setting (50, 73 or 87°C) for an hour to heat the house as quickly as possible.