


### External Sensor for Thema vintage

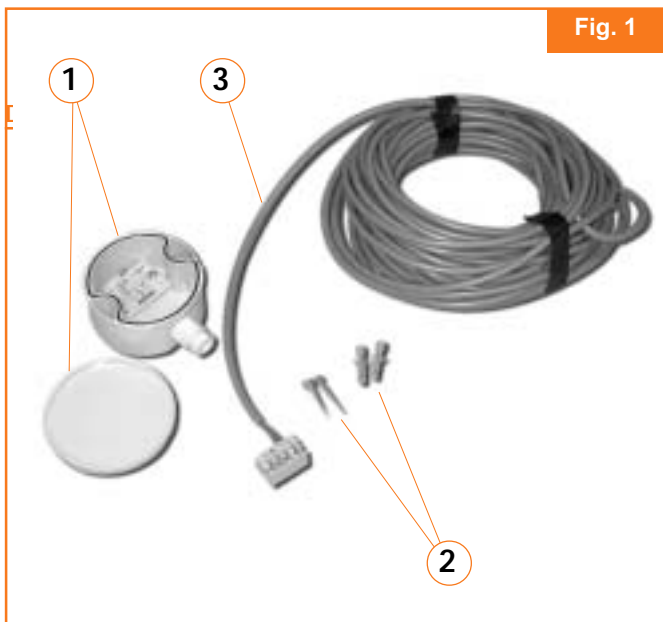

- 1 - 1 round plastic box with sensor
- 2 - 2 screws and 2 wall plugs (in the sensor)
- 3 - 2 wire-cable of 15 m with 4-way connector


#### Application

Themaclassic, Thema, Themafast and Themaplus

The external sensor controls the temperature of the heating water, according to the outside temperature. It works only with an installation equipped with a room thermostat.

#### Characteristics

- Tension d'alimentation fournie par la chaudière : 24 V (continu)
- Raccordement direct du câble de la sonde (15 m) sur la carte principale de la chaudière
- Adaptable operation to suit the climat conditions in the area :  
15 settings are available, with direct setting on the user interface

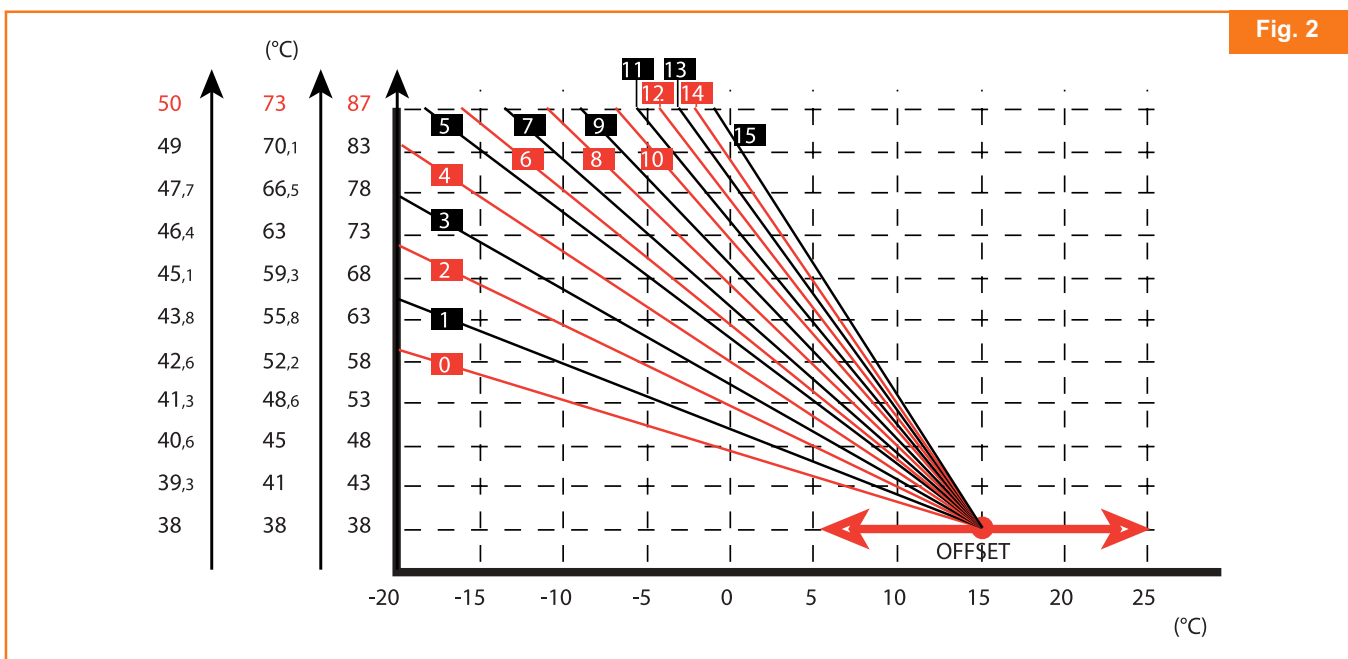

### Installation conditions

#### For the sensor :


- recommended siting facing NORTH - NORTH-WEST
- avoid interference from the sun (the shelter of an awning is perfect).
- Fix the sensor to the wall, preferably with a bracket so as to avoid taking the temperature of the supporting wall.

#### For the cable :

- in compliance with electricity standart NF C 15-100.

### Assembly instructions (Fig. 3)

- Disconnect the 230 V supply of the boiler before plugging in the external sensor.

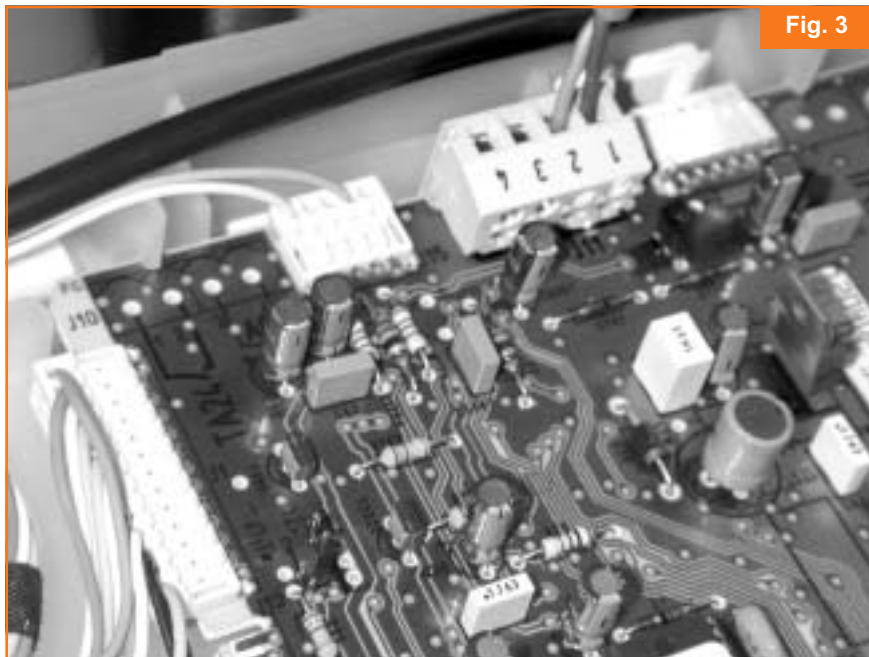

**IMPORTANT** :When first switched on, the boiler runs at maximum setting (50, 73 or 87°C) for an hour to heat the house as quickly as possible.